
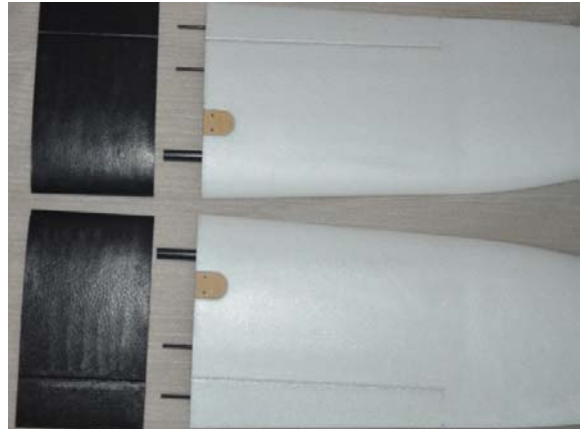



Traveler 1160MM Upgrading To 1400MM

#1 take out extension wing and Reinforcement rod, split it as per the instructions

Black one is Extension wing
White one is 1160 Main-wing

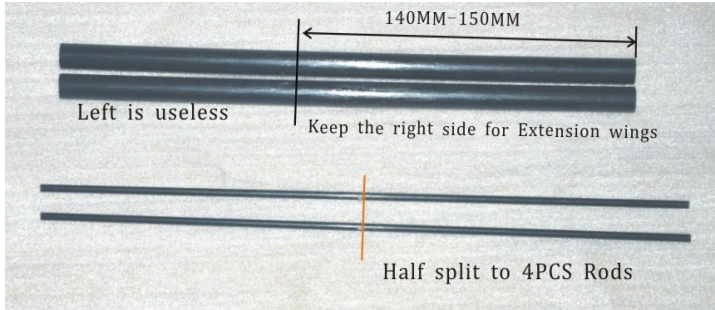


#2 Find out the right side, Metal parts should be outside which mate to fuselage.

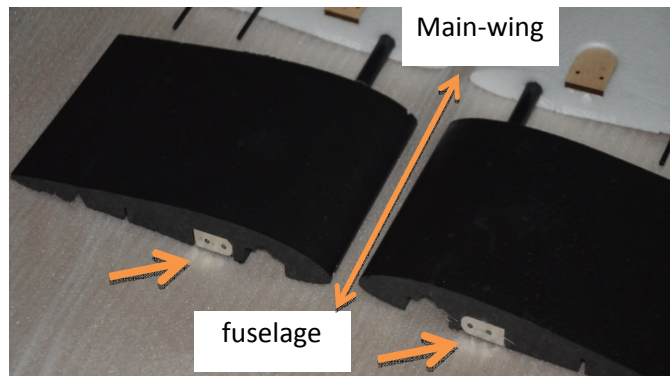

#3 Gluing to both contact surface and install reinforcement rods





#4 Gluing to install plywood and foam covers

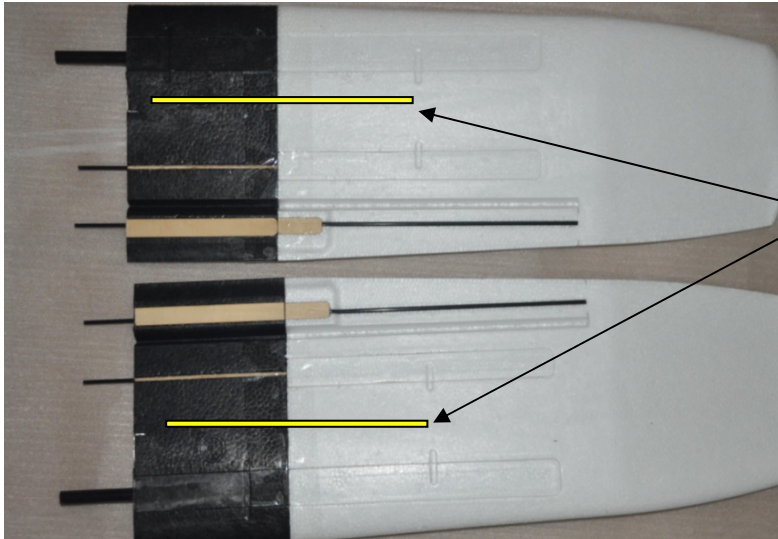


(further reinforcement is required)
T1160 users: there are two fiber strips included in the extension wing package, please cut a slot to install the fibre strips but new 1400 user is unnecessary to reinforcement.

#5 Modify you fuselage, use knife to make a cave for the magnet (size:19.5*10*2.8MM)

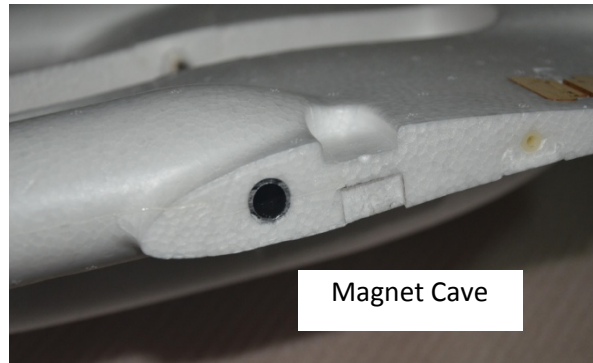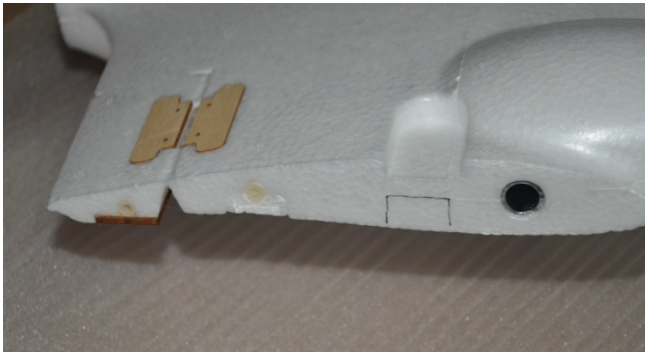

Magnet Cave

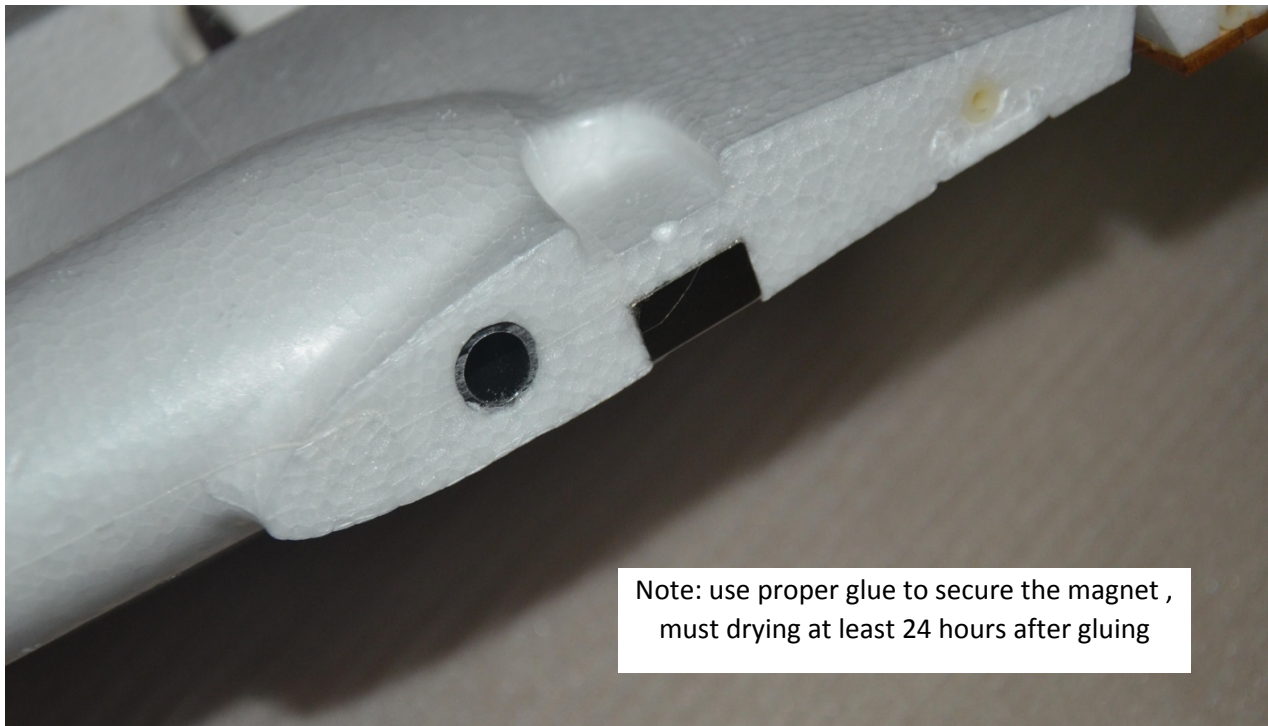

Note: use proper glue to secure the magnet , must drying at least 24 hours after gluing